

operating your **DIGITAL DATA LOGGER (DDL)**

Stopping the DDL *Before You Download*

STEP 1 TO STOP YOUR DDL

- Press and hold the *Start/Clear/Stop button* until the word **STOPPED** appears on the screen (fig. 1).
- When **REC•** disappears, **release the button immediately**.
- Your DDL is now in **stopped mode** (fig.2).

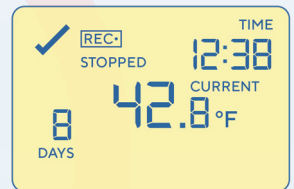


fig. 1

STEP 2 DISCONNECT THE PROBE FROM THE DDL

- Unplug your DDL from its probe (fig. 3)

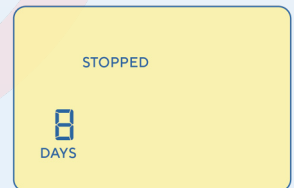


fig. 2

STEP 3 DOWNLOAD DATA FROM YOUR DDL!

- Take your DDL to your computer, open the software and insert the logger in the docking station to download the data.
- Repeat the process every 30 days.

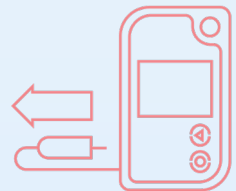


fig. 3

QUESTIONS? CONTACT:

TempCheck@phila.gov | 215-685-6777 | vax.phila.gov

operating your **DIGITAL DATA LOGGER (DDL)**

Starting the DDL After You Reconfigure

STEP 1 CONNECT YOUR DDL TO THE PROBE

- Reconnect the probe to your DDL (fig. 4).

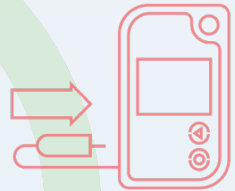


fig. 4

STEP 2 START YOUR DDL

Your DDL must be in ready mode to start as shown in fig. 5. If your DDL is not in ready mode, please contact TempCheck@phila.gov for troubleshooting.

- Press and hold the *Start/Clear/Stop* button. **STARTING** will appear (fig. 6).
- When **READY** disappears, **release the button immediately**.
- **STARTING** will be replaced with **REC-** and the current temperature reading will appear (fig. 7). **Your DDL is now recording temperature!**

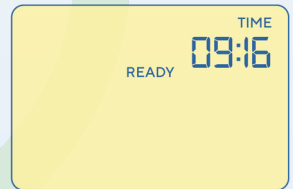


fig. 5

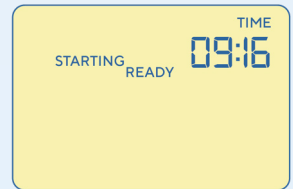


fig. 6

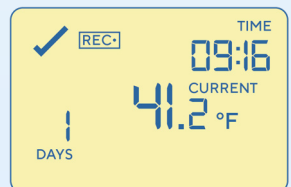


fig. 7

QUESTIONS? CONTACT:

TempCheck@phila.gov | 215-685-6777 | vax.phila.gov